

## BELMONDO® Basic, Classic, Trend, Walkway, Walkpro, Paddock

### Prerequisites:




#### Ground:

- Paved
- No holes
- No ridges
- Max. 2% slope  
(Paddock: Min. 1 - max. 2%)

#### Mats:


Even temperature:  
min. 5°C to max. 30°C  
(store accordingly!)

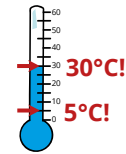


**For wooden floors, please consult us!**

### You will need:


#### Measuring:




#### Marking:



#### Cutting:




#### Connecting puzzle:




**i** BELMONDO® mats can be versatily combined using the puzzle interlock system:

#### Cross joint:

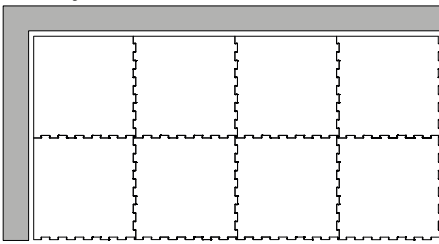

#### T-joint pattern:

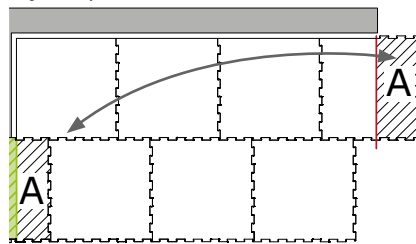


(Leftover pieces can be well utilized)


**i** To bind liquids (urine), a small amount of absorbent bedding is always required in a loosebox. We also recommend a minimal amount of bedding in an open stable.

**!** **Do not install dividing walls, posts, etc. on the mats!**  
(Stability is not guaranteed! Do not clamp the mats!)

**!** **Compatibility with vehicle traffic**  
Comply with the BELMONDO® vehicle traffic specifications!




## 1 Remove the puzzle edges facing the wall

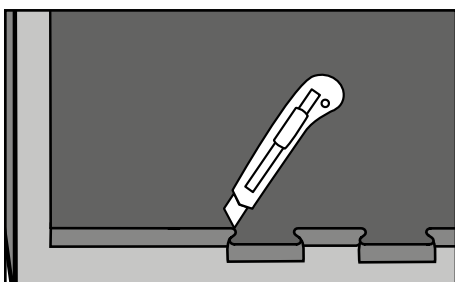


### **i** Tips for cutting:

- Moisten the blade slightly
- Bend the mats / pull them apart slightly
- Possibly lay a board underneath - score - cut

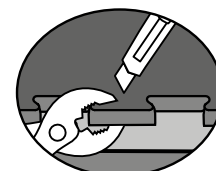


**Tip:** Use pliers to pull small pieces apart

## 2 Install mats to fit

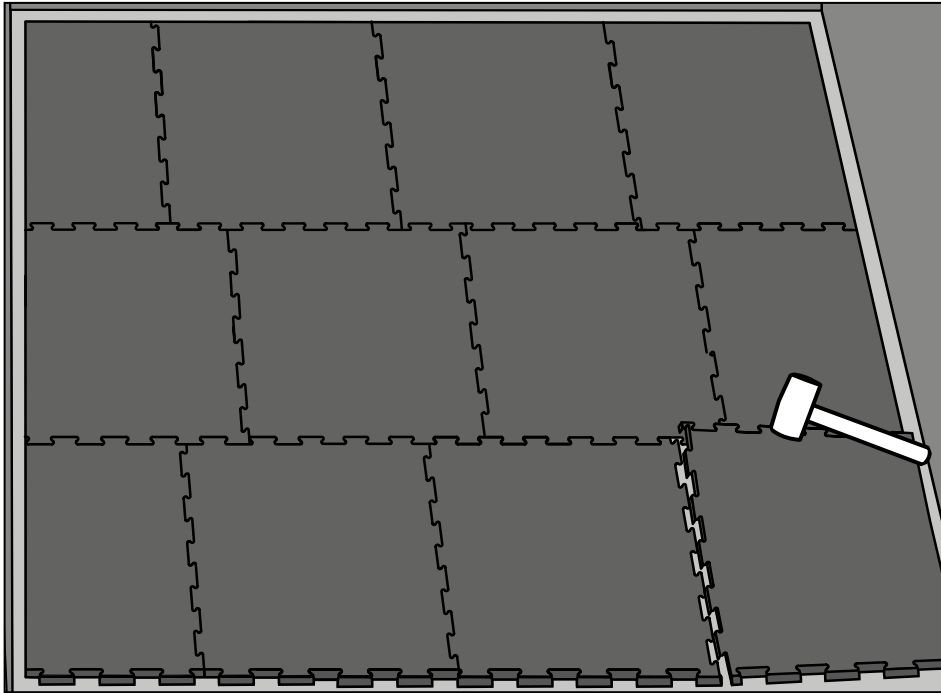

Join the mats

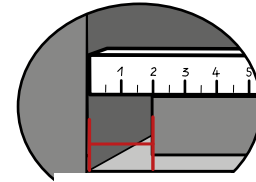

1 - 2 cm / 2 - 3 cm

Expansion joint at the side boundary:


- 1 - 2 cm in indoor areas
- 2 - 3 cm in outdoor areas with solar radiation

**Tip:**


For heavily used areas (e.g. loosebox entrance), install whole mats (if possible, without a puzzle interlock system!)

**Tips for large areas:**



- First, draw a straight line 2 - 3 cm from the edge along the wall/side boundary (e.g. using a chalk line).
- Place the mats along the straight line (note that slanted or bent mats are hard to connect).
- To facilitate tensionless installation, we recommend dividing up large areas (100 m<sup>2</sup> and larger) evenly and leaving a joint of 2 - 3 cm at least every 12 m.
- We also recommend adopting a T-joint pattern.

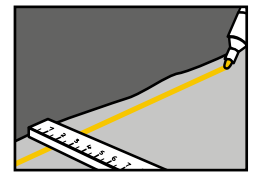

## 3 Adapt

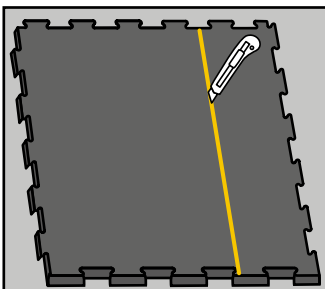

If necessary, cut edge mats as required and fit them together

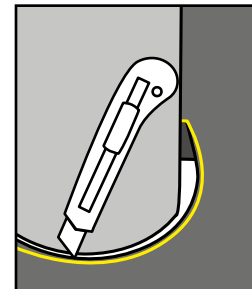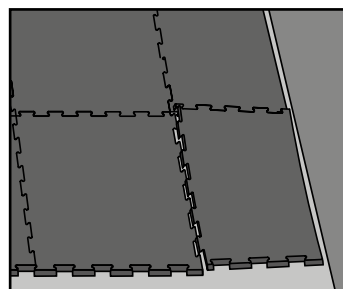

If necessary, cut mats to fit

**Tip for areas with slippery ground and/or somewhat stronger slope:**

Fix mats to the floor (e.g. at the upper edge with two fixings per mat) to ensure the flooring cannot move due to any impacting forces or the downward slope.

Appropriate installation may differ due to local conditions. Therefore, the manufacturer shall not be liable for installation!